




Asus U50F-RBBAG05 Underpanel Replacement

This is a guide to remove and/or replace the lower panel of your Asus U50F-RBBAG05.

Written By: Kelly Greeling

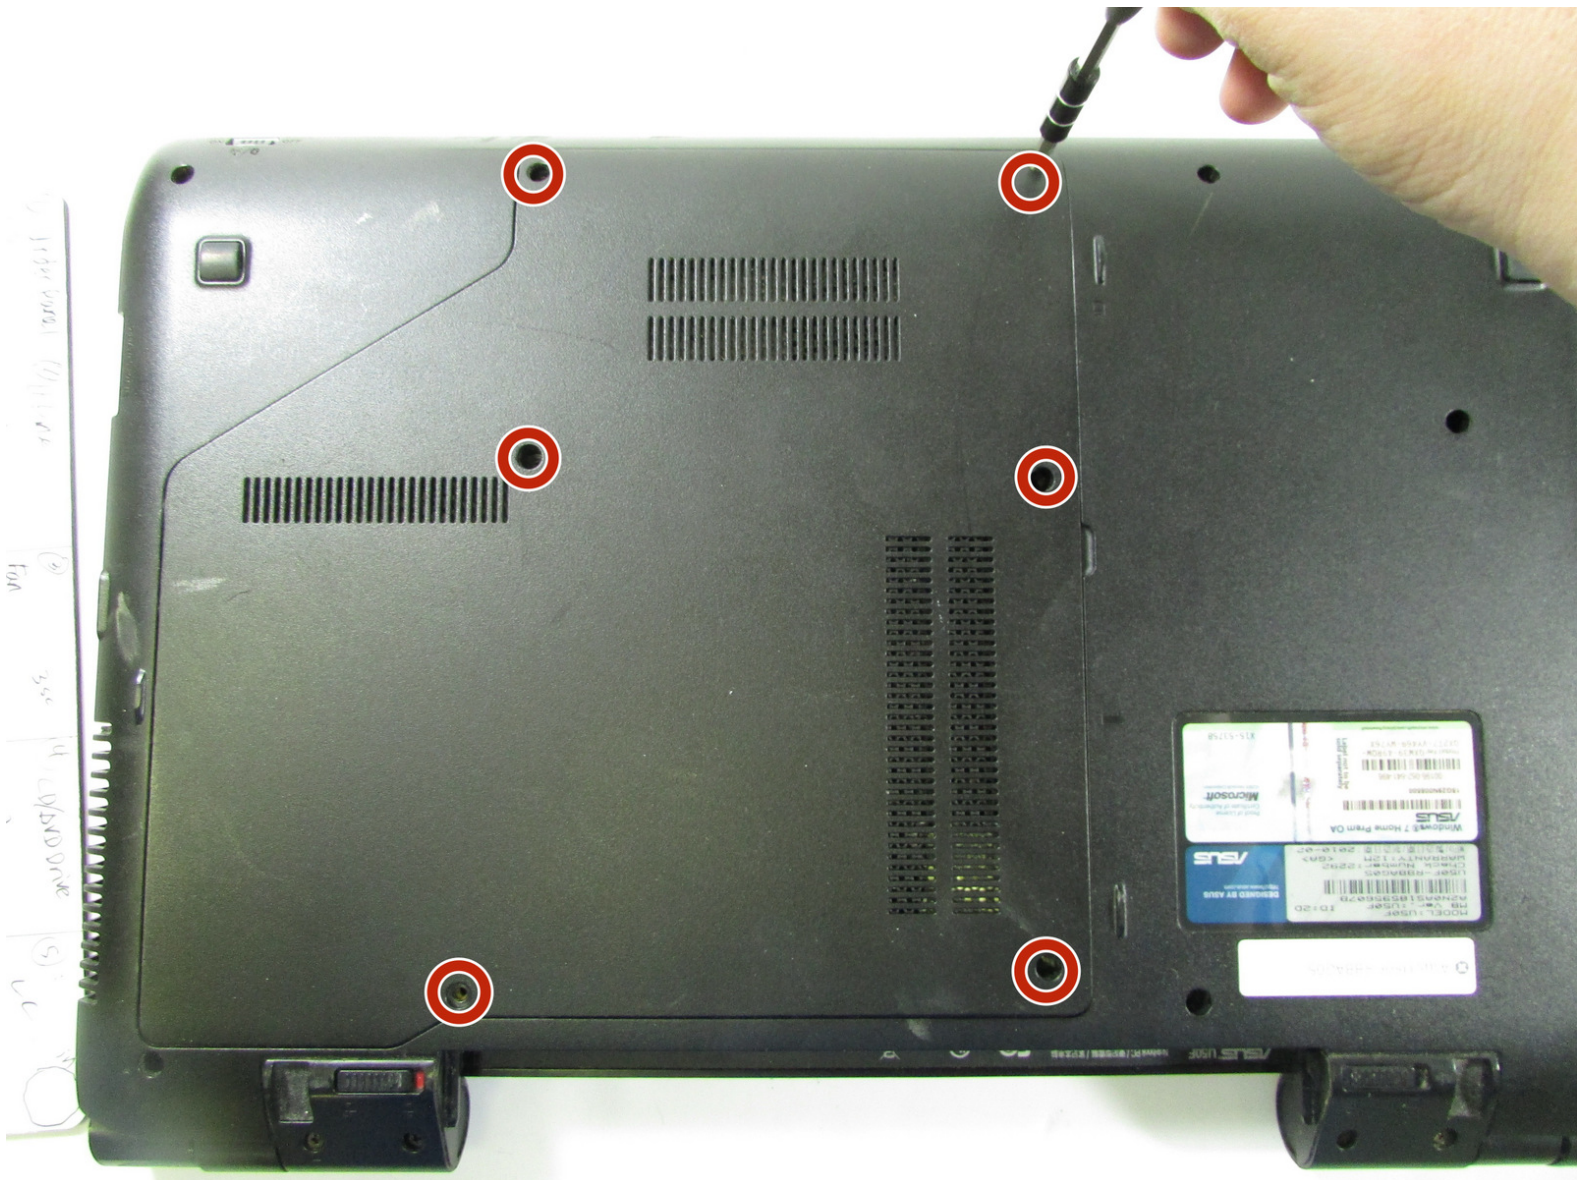

INTRODUCTION


We are going to teach you how to remove /replace the Lower Panel of your Asus U50F-RBBAG05.



TOOLS:


- Philips Head Screwdriver: Size PH1 (1)
 - Spudger (1)
 - dry erase marker (1)
 - Magnetic Project Mat (1)
-

Step 1 — Battery

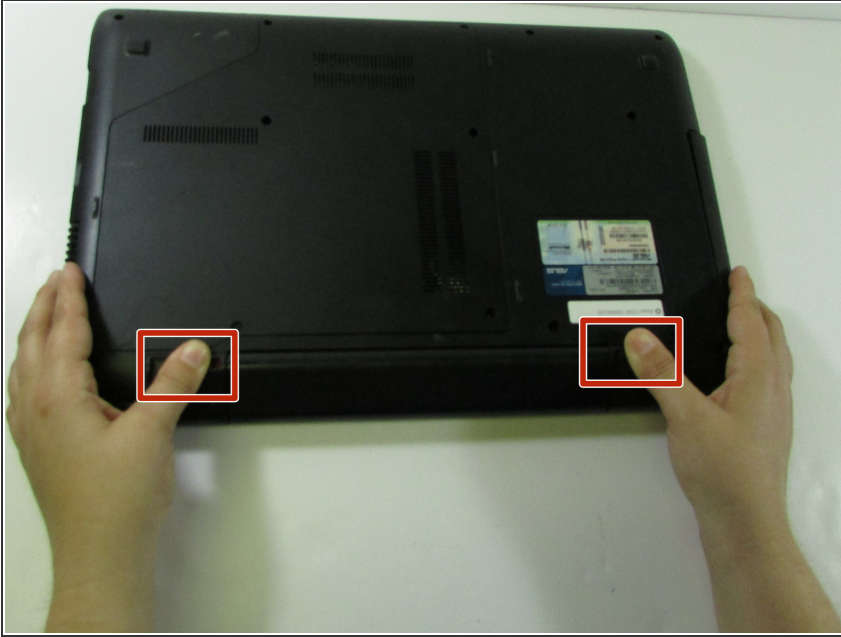


- First Step:
- Slide the tabs of the side of the battery back
- There is one on the left that can be locked into position (when it is showing red, it is unlocked)
- The tab on right you have to hold back while removing the battery.

Step 2

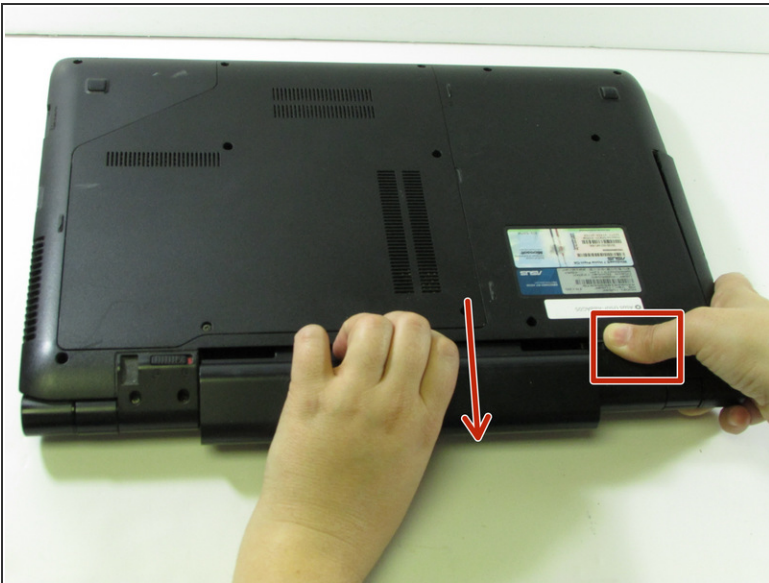

- The tab on right you have to hold back while removing the battery.
- Pull the battery out.

Step 3 — Underpanel

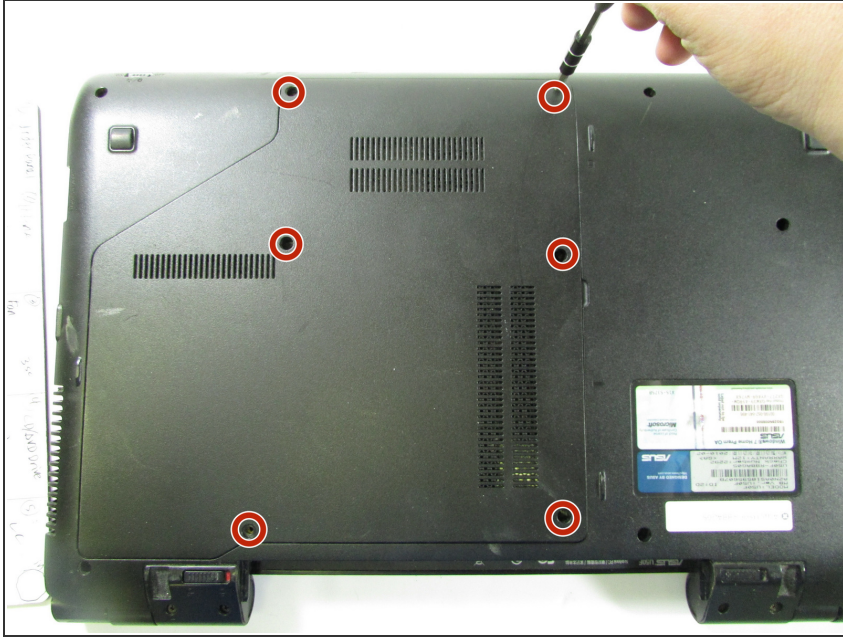



- Remove 6 screws

Step 4



- Pry the lower panel up with your fingernail/spudger.

Step 5

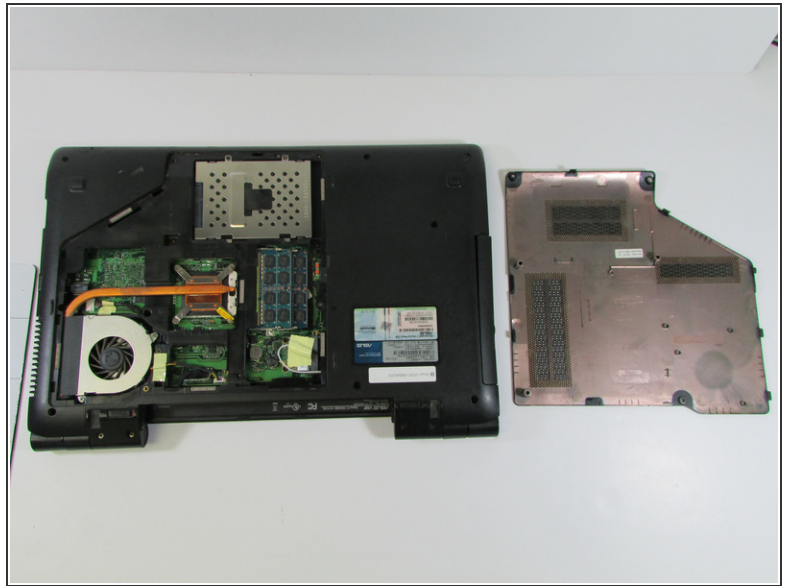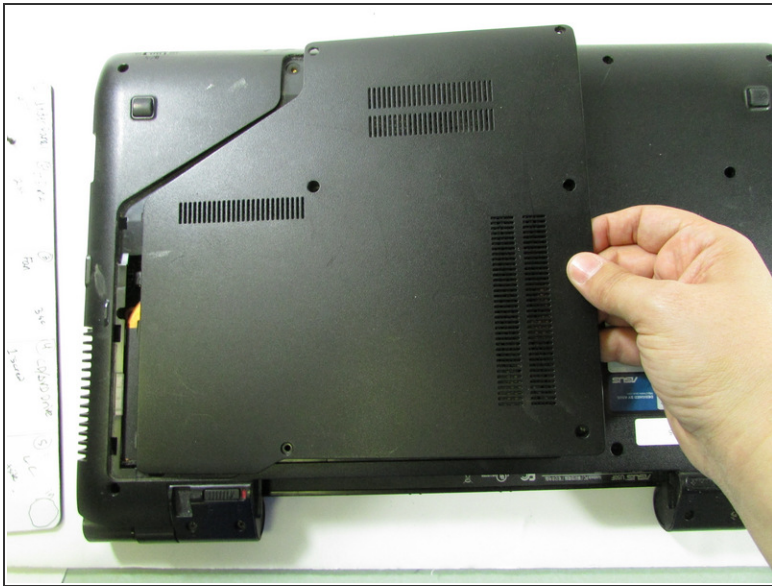

- Lift up and remove

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-13 05:16:35 PM.